




Over Fascia Vents Fitting instructions



1. Set the fascia 30mm lower than normal. Fix the Fascia Vents continuously along the fascia.



2. Install the Underlay Support Trays over the Fascia Vents.

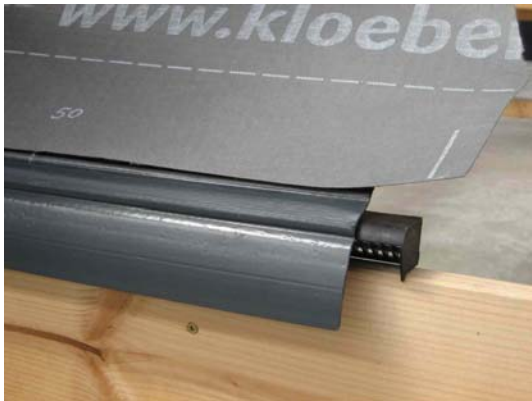

3. Lay the underlay so that it is level with the lip of the Underlay Support Tray, ensuring that it is not exposed to sunlight. Batten and tile as normal.