

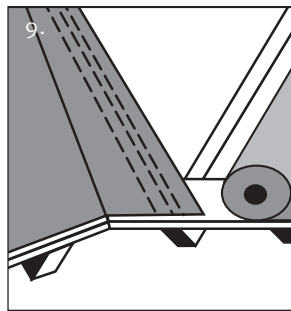
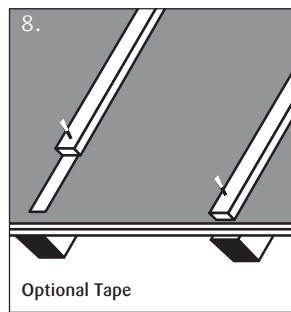
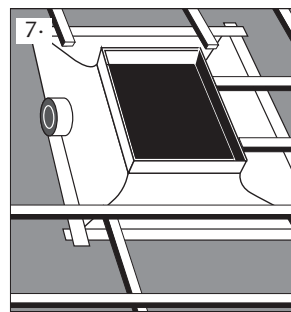
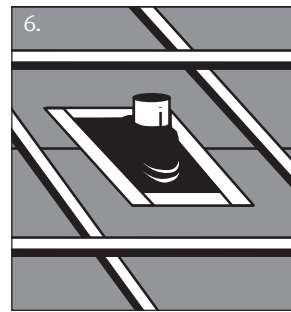
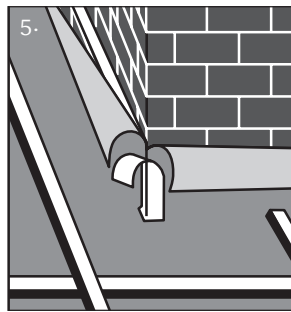
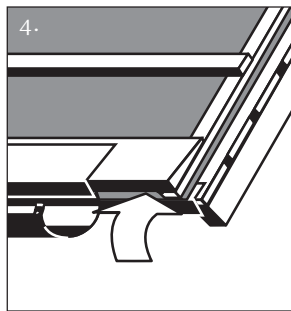
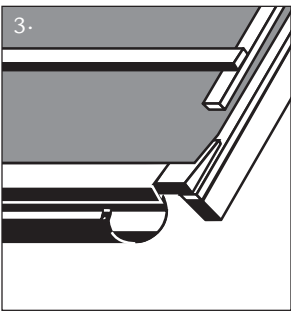
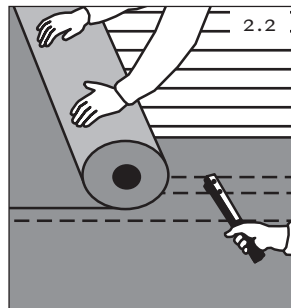
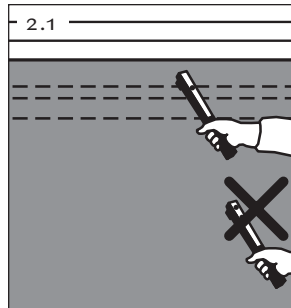
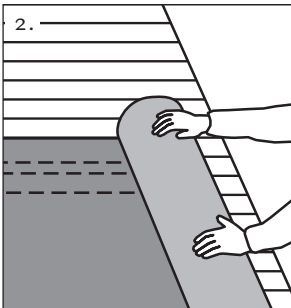
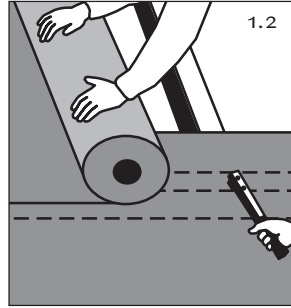


Installation instructions Permo® - Breathable Underlay

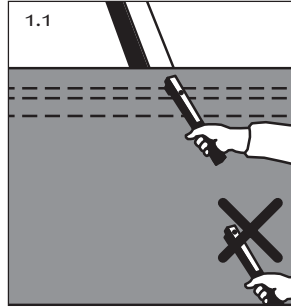

Details

KLÖBER

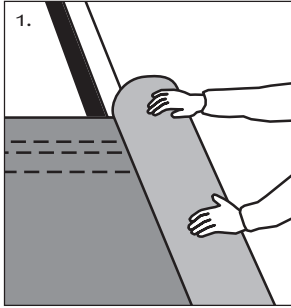