
Contract Dry Verge

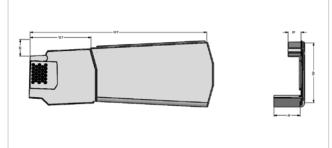



Can also be used for this products (but only for brown and slate grey):

Uni-Ridge End Cap Half Round	KR9772
Universal Angle End Cap	KR9773
Eave Ridge cartons	KR9733
Batten End Clips	KR977100

Ridge End Pack contains:

2 Ridge End Caps and 4 Screws; 10 packs per carton

Eaves Ridge Pack contains:

2 Ridge Closures, 2 Eaves Closures, Nails; 20 packs per carton

Contact Dry Verge is an all-weather, quick and easy fixing, requiring no special tools, compatible with any ridge system, wet or dry.

Product features & benefits

- Mortar free, all weather fixing and UV stable
- Secure mechanical fixing avoids wind uplift problems
- Quick and easy to fit no special tools required
- Weatherproof and maintenance free
- Unaffected by settlement or differential movement
- Prevents entry of birds and large insects

Area of application

Suitable for:

- Refurbishment or new build on roofs from 12.5° to 90°
- Makes and profiles of concrete interlocking tiles between 260-350mm batten gauge

Material

Dry Verge unit	Polypropylene
Eaves Closure	Polypropylene
Ridge Closure	Polypropylene
Ridge End Cap	Polypropylene
Batten End Clip	Stainless steel

Product Codes / Colours

Dry Verge Unit Left Hand

Brown	KR9785-0247
Slate Grey	KR9785-0429

Dry Verge Unit Right Hand

 Brown
 KR9790-0247

 Slate Grey
 KR9790-0429

Dimensions

397mm long x 139mm wide x 59mm deep

Packaging

10 units per pack – 5 packs per carton

Weight (per pack) 9.2kg

Regulations

Complies fully with all relevant British Standards including BS 8612.

Installation

Extend the tiling battens 20mm beyond the gable wall or barge board and nail a Batten End Clip to the end of every batten. If a batten end clip is not being used we recommend that the batten is extended 30mm over the barge board or brickwork and 40mm (minimum) x 3.25mm ring shank nails are used to fix the verge units. Prior to fixing the batten, ends must be in good condition with no signs of decay or splitting. Fix the Eaves Closure to the end of the fascia board or brickwork. Fit the first verge section ensuring that it is located onto the eaves closer. Nail in position, through the Batten End Clip into the batten. Clip the bottom of the verge unit in place first, then lift the top of the verge unit over and clip in to place. As each successive verge tile is laid, slide on a Contract Dry Verge Unit up to the tile toe, engaging with the Unit below, nail in position through the Batten End Clip into the batten. Insert a Ridge Closure into the last Unit, interlocking the combs of each Contract Dry Verge Unit at the apex. Screw fix the Ridge End Cap to the ridge batten.

TS-05#45-UK-0618. We assume no liability for typing errors.

Klober Ltd



Unit 6F · East Midlands Distribution Centre · Short Lane · Castle Donington · Derbyshire · DE74 2HA Tel. +44 (0)1332 813 050 · Fax +44 (0)1332 814 033 · www.klober.co.uk · info@klober.co.uk